

Arrowboards


Arrowboards when combined with Advance warning signs and delineation devices, are especially useful in situations which require higher than normal visibility.

Examples where Arrowboards should be used are on overnight setups, high speed and high volume roadways (70km/h and greater) and in poor weather conditions.

- Recommended minimum size for an arrowboard is 900mm x 1200mm.
- Light bars on vehicles maybe used in emergency situations, or when posted speeds are 60km/h or less.



Arrow Pattern

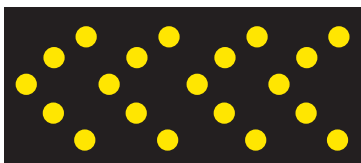

Chevron Pattern

Specialty and Lighting Devices

Amber Flashers or Strobes

To be used on vehicles and equipment in addition to the warning signing and channelization devices.

Amber flashers should also be used on light barricades to increase visibility of hazards.



Steady Burn Lights

To be used on channelization devices such as drums or vertical panels. These devices are used to supplement channelization devices to provide better night time guidance for motorists.



Flags

Flags are used on ground mounted warning signs to improve their visibility. The total height of the warning sign and the flags should be a minimum of 2m.

